



GATES INSTALLATION - DOORS ONLY -




INSTALLATION DE PORTAILS - BATTANTS SEULS -



LEGUNG TORE NUR TUREN

FOLLOW CAREFULLY THE INSTALLATION INSTRUCTIONS
SUIVEZ ATTENTIVEMENT LES INSTRUCTIONS POUR L'INSTALLATION
BEFOLGEN SIE SORGFALTIG DIE MONTAGEANLEITUNG

SLIDING GATE - COULISSANT - SCHIEBETOR

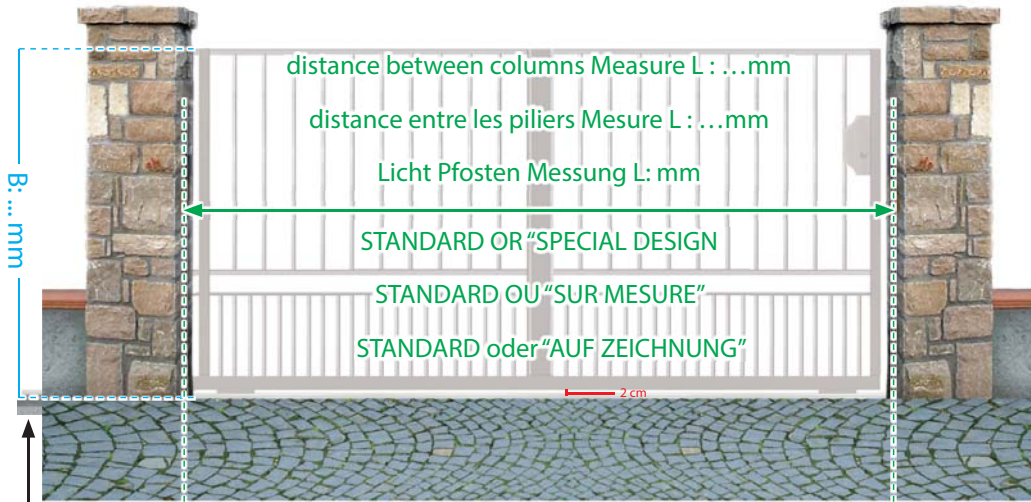

N.B. Sliding rail included

N.B. Rail de guidage inclus

N.B. Schiebeführung inbegriff

L: ... mm
(distance between columns)
(distance entre les piliers)
(Licht Pfosten)

For the installation of standard doors between concrete (or other materials) columns use the value (L)


Pour l'installation de battants standards entre des piliers en béton ou autre matériel, utilisez la cote (L)

Um die Standardtüren, zwischen den Wänden aus Beton oder andere zu installieren, behalten die Quote (L)

width
LARGEUR BATTANTS
distance between columns
distance entre les piliers

C AUßEN TUREN L LICHT PFOSTEN

MB	2385 mm	2285 ÷ 2405 mm
SB - SA	2880 mm	2780 ÷ 2900 mm
LB - LA	3380 mm	3280 ÷ 3400 mm
SL	3880 mm	3780 ÷ 3900 mm
EL	4120 mm	4020 ÷ 4140 mm

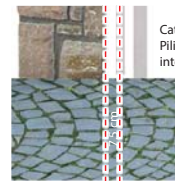

Catch post included
Pilier de refoulement inclus
internen Pfoste inbegriff

7,5 cm

ATTENTION: THE LISTED MEASURES ARE REFERRED TO THE INSTALLATION OF STANDARD PRODUCTS
ATTENTION: LES MESURES INDIQUEES FONT REFERENCE A L'INSTALLATION DE PRODUITS STANDARDS
ACHTUNG: MESSUNGEN BEZIEHEN SICH AUF DIE INSTALLATION VON PRODUKTEN MIT STANDARD ABMESSUNGEN.